


Адаптер для дисковых фрез

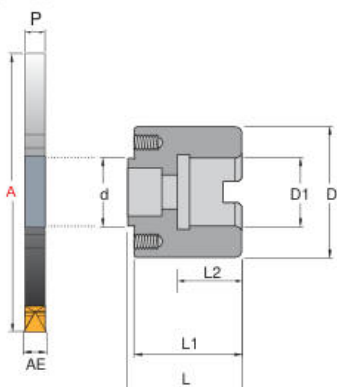

SBL/STL



BL / BLL

Обозначение	Размеры (мм)									Доступная P
	D	D1	d	C	B	L	L1	L2	A	
BL45-22	45	22	22	34	5	43	41.8	27	80	0.47
BL45-25.4		25.4				45	43.8		100	
BL58-31.75	58	31.75	32	46	6	55	53.8	28	125	0.95
BL58-32		32							160	
BLL45-22	45	22	22	34	5	43	40.5	27	80	0.47
BLL45-25.4		25.4				45	42.5		100	
BLL58-31.75	58	31.75	32	46	6	55	52.5	28	125	0.95
BLL58-32		32							160	



* Выполните шаги 1-2-3 для выбора подходящего адаптера: 1. Доступная P 2. Размер "d" 3. Размер "D1".

СТАНДАРТНЫЕ ЗАП.ЧАСТИ

Адаптер	Винт	Адаптер	Винт	Винт оправки	
BL45-22	C90512	BLL45-22	C90512	M1035	
BL45-25.4		BLL45-25.4		M1235	
BL58-31.75	C90612	BLL58-31.75	C90612	M1235/M1635/ W2403	
BL58-32		BLL58-32		M1635	